

Frequency sweep procedure

1. Press and hold button UP & button DOWN simultaneously then turn on the machine by the fuse on the rear plate until display stop show **r.141** and appear power value set .
2. Push and hold button SELECT till you see **CP**
3. Press button DOWN till you see **SYSt**
4. Press button SELECT and **FrEQ** will appear on the display.
5. Press button SELECT and **---** will appear. This is autotune procedure in action.
After successful will appear current operating frequency **F 45**. (*this is for example, you frequency may be different than shown in this manual*)
6. Press button DOWN till you see **End**
7. Press button SELECT
8. Press button DOWN till you see **End**